


HT-SERIES PTZ SETUP

Do the following to set up your PTZ in HT-SERIES.

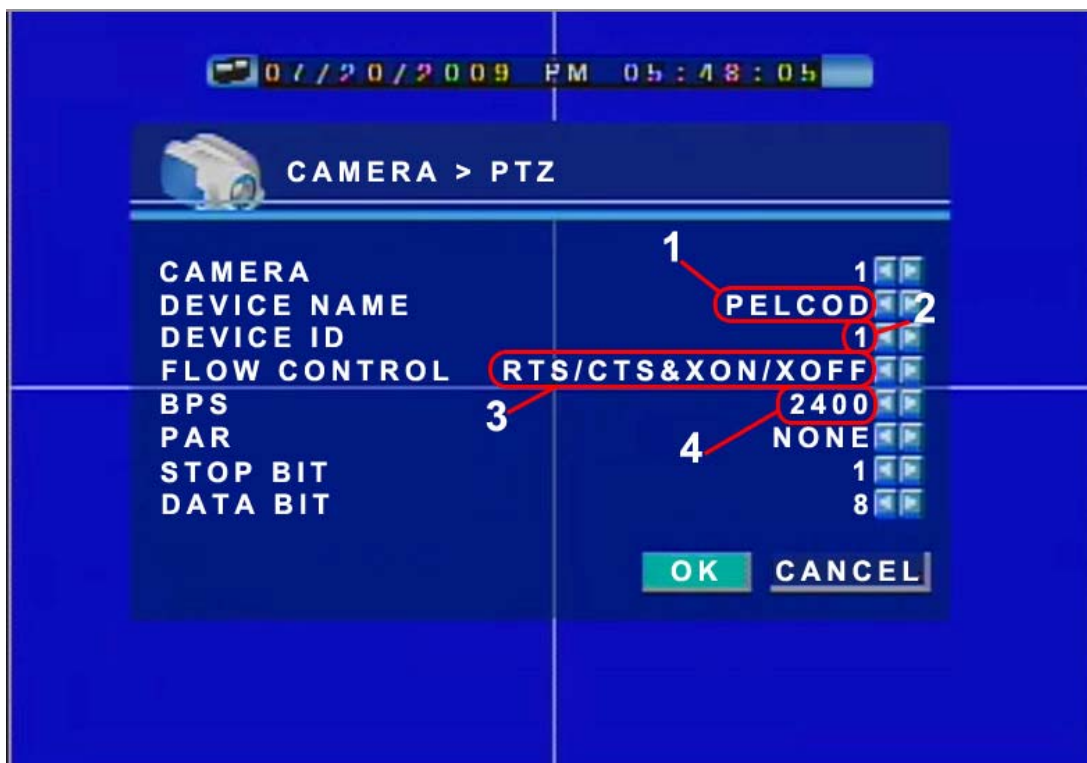

- 1) DEVICE NAME = By DEFAULT, UNIX' PTZ uses PELCO-D
- 2) DEVICE ID = By DEFAULT, UNIX' PTZ uses ID 1
- 3) FLOW CONTROL = For UNIX' PTZ uses "RTS/CTS&XON/XOFF"
- 4) BPS = By DEFAULT, UNIX' PTZ uses 2400

NOTE

- You can ONLY PANT/TILT and ZOOM.
- In order to make PRESET, SWING, PATTERN, or ETC... you will need to buy a PTZ CONTROLLER.
- PANT/TILT & ZOOM is possible over NETWORK.