


# PTZ FULL CONTROL WITH HQ-SERIES

The **DEFAULT PROTOCOL** for all the UNIX PTZ is **PELCO-D**

To have **FULL CONTROL** over the **UNIX PTZ**, select **CYNIX** or **PROBE** depending on **MODELS**.

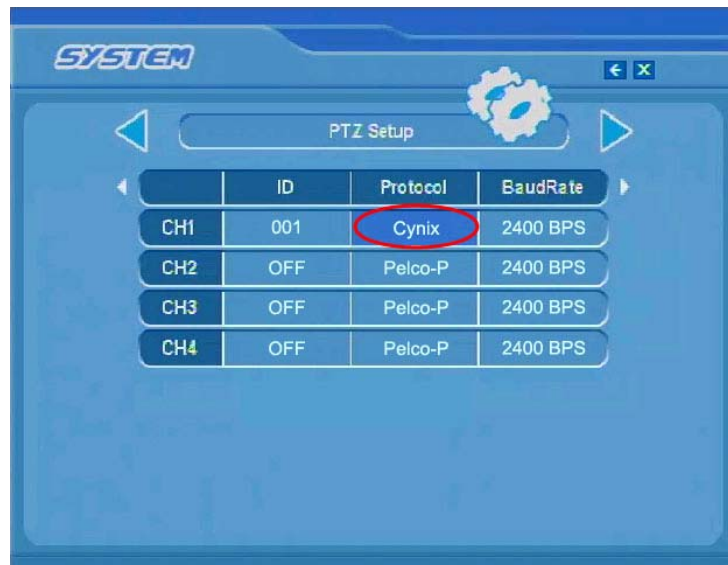

## PTZ MENU FROM DVR

Press "M" to open PTZ MENU (Only UNIX PTZ by using CYNIX or PROBE)



## PTZ MENU FROM REMOTE CLIENT

PRESS "DOME MENU" to open PTZ MENU (Only UNIX PTZ by using CYNIX or PROBE)

